




Enfriador evaporativo

Evaporative cooler

Refroidisseur par évaporation

Climatizador evaporativo

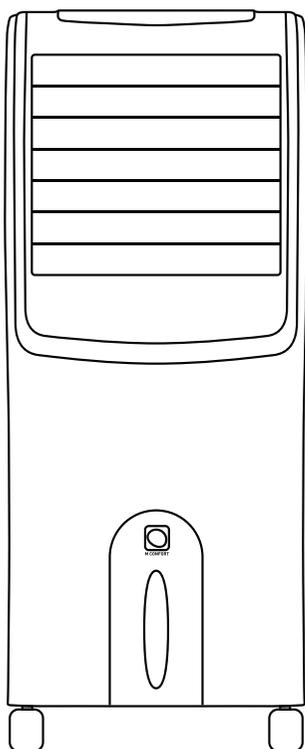

E1200

Manual de Usuario	1 - 8
User's manual	10 - 18
Manuel de l'utilisateur	20 - 28
Manual de usuário	30 - 38



MCONFORT E1200

Security warnings:

This equipment can not be used by children or people with impaired mental faculties if it is not under supervision or who have been instructed in the use of the equipment in a safe way and understand the dangers in which it can derive a bad use of it. Children should not play with the equipment. Cleaning and maintenance of the equipment should not be carried out by children without supervision.

If the power cord is damaged, it can only be replaced by the technical service.

For cleaning or maintenance, the equipment must be disconnected from the electrical network.

Also disconnect it for filling the water tank.

I. PRODUCT FEATURES	11
II. CONSTRUCTION DRAWING	11
III. ACCESSORIES LIST	12
IV. TECHNICAL PARAMETERS	12
V. OPERATION INSTRUCTION	13
VI. CONTROL PANEL	14
VII. IMPORTANT SAFEGUARDS	16
VIII. MAINTENANCE AND CLEANING	17
IX. CIRCUIT DIAGRAM	18
X. TROUBLE SHOOTING	19

I. PRODUCT FEATURES

- COOL:

It cycles the water to blow cool air. It can lower the surrounding temperature and provide you a comfortable environment in hot summer.

- HUMIDIFIER:

It humidifies the air to avoid skin dry and spall in winter.

- IONIZER:

It releases negative ions to freshen the air and care health.

- DRAWER STYLE WATER TANK, DETACHABLE FILTRATION MESH.

It is easy to clean. Filter removes harmful tiny substances, such as dust and pollen.

- ENERGY SAVING, HIGH-EFFICIENCY, FRIENDLY ENVIRONMENT.

The input power is 130W.

- WIDE RANGE OF AIR OUTPUT.

100 angle wide range of air output. 3 fan speeds: HIGH - MID - LOW

- REMOTE CONTROL.

6 meters remote control, 120 angle wide range receiver.

- BEEP SOUND REMINDER.

It has beep sound reminder function, convenient to use.


- MEMORY FUNCTION.

It can memorize the current working status. The memory is not cleaned until the power supply is off.

- HIGH GRADE COMPUTER CONTROL SYSTEM.

- 1 TO 24 HOURS TIMER SETTING.

II. CONSTRUCTION DRAWING

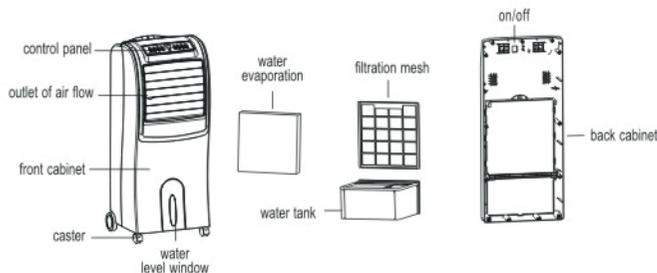



MCONFORT E1200

III. ACCESSORIES LIST

LIST	ACCESORY NAME	QUANTITY (PCS)
1	REMOTE CONTROLLER	1
2	INSTRUCTION MANUAL	1
3	CASTER WITH SKID	2
4	CASTER WITHOUT SKID	2
5	CASTER WRENCH	1

IV. TECHNICAL PARAMETERS

MODEL	MCONFORT E1200
RATINGS	220-240V/50Hz 130W
MAX Air Flow Consumption	1600m ³ /h
MAX Water Volume	10L
Net Weight	8,2 Kg
Measurements	372x332x864mm

V. OPERATION INSTRUCTION

- 1-. Pull the unit outwards from the carton and place it on a solid hot-proof horizontal surface.
- 2-. Check if the accesories are complete, same as the accesories list.
- 3-. Place the unit on a solid hot-proof horizontal surface. Take out the casters and caster wrench to assemble.

NOTE: Casters with skid are for the two front holes and casters without skid are for the two back holes at the bottom of the unit (shown as fig.1)

- 4-. Pull upwards the water tank and pull outwards about 10cm to the locking pin, then add water. (shown as fig.2)

NOTE:

- Water level must be between the MIN and MAX line. (shown as fig.3)
- After some time operation, dust and dirt may occur in water tank. It is recommended to change water and clean water tank frequently.

- 5-. Only use the unit with correct AC outlet.

- 6-. Insert the plug pin into a wall socket and turn on the power switch wich is at the side of the unit. A small beep sound can be heard and the power indicator will be on.

NOTE:

- To protect against electric shock do not remove plug from wall outlet by wet hand.
 - Unplug from outlet while moving the unit.
 - Insert the plug pin into the wall socket and make sure it is connected well.
- 7-. Press “HUMIDIFIER” button to improve the air damp, avoid skin dry and spall.



fig.1



fig.2

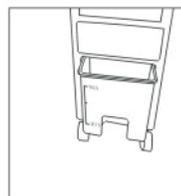


fig.3



MCONFORT E1200

VI. CONTROL PANEL

Remote controller control panel with same function as the unit control panel.



Insert the plug pin into a wall socket and turn on the power switch which is at the side of the unit. A small beep sound can be heard and the power indicator will be on.

- **ON/OFF:** Press once this button to make the unit ready for working. It will start up with MID in 3 seconds and then revert to work under the memorized status. If for the first time use, it will start up with MID in 3 seconds and then work with LOW. Press again this button to turn OFF.

- **SPEED:** Press this button to select desired fan speed, LOW - MID - HIGH - LOW, in turn, at the same time can digital display 1, 2, 3.

-MODE: Press this button to select desired wind mode, NATURE - SLEEP - NORMLA - NATURE, in turn. The corresponding wind mode indicator will be displayed.

(1) NORMAL: It works as per the selected fan speed (HIGH, MID, LOW)

(2) NATURE: It works as per the presetted computer program, imitating the natural irregularly wind.

(3) SLEEP: It works as per the presetted computer program, alternating between different fan speed.

1-. If it is selected HIGH, the unit will work under HIGH NATURE wind mode for half an hour, then revert to work under MID NATURE wind mode for half an hour and then revert to LOW NATURE wind mode.

2-. If it is selected MID, the unit will work under MID NATURE wind mode for half an hour, then revert to LOW NATURE wind mode.

3-. If it is selected LOW, the unit will work under LOW NATURE wind mode.

-LEFT AND RIGHT SWING: Press once this button can auto left and right air swing. Press again this button to cancel.

-UP AND DOWN SWING: Press once this button can auto up and down air swing. Press again this button to cancel.

-COOL: Press once this button to start the evaporative cooling function. Press again this button to cancel.

-IONIZER: Press once this button to release negative ions into the air, to freshen the air and care health. Press again this button to cancel.

-TIMER: It can be set between 1 to 24 hours, increased by 1 hours intervals, when the digital display 24 hours, press again this button to cancel.



MCONFORT E1200

VII. IMPORTANT SAFEGUARDS

- 1-. READ ALL INSTRUCTIONS BEFORE USING.
- 2-. Do NOT open and repair the unit by any unqualified person.
- 3-. To protect against electric shock, keep the unit dry. Do not immerse in water or any other liquid.
- 4-. Unplug from outlet while filling water, before cleaning, maintaining or moving the unit.
- 5-. Unplug from outlet when not in use.
- 6-. Do not insert foreign objects into the grid of air vent (intake or outlet) during the operation.
- 7-. Do not cover the appliance with paper, cardboard, plastic, metal foil or any other flammable material. Otherwise, a fire may occur. Keep the appliance away from any hot surfaces.
- 8-. Place the unit on a solid hot-proof horizontal surface.
- 9-. Do not use outdoors.
- 10-. Water level must be between the MIN and MAX line.
- 11-. After filling with water, do not tilt the unit and avoid moving it, which may cause water to overflow the sides of the tank and leak. If the unit needs to be moved a little, push on the side gently.
- 12-. Never turn the unit on its sides.
- 13-. Do not place any objects on the top of the unit. The air vent must not be obstructed during the operation.
- 14-. Do not use petrol, toluol, etc to clean the unit body. For slight dirt on the body, wipe it off with a soft damp cloth. For greasy dirt, squeeze a little toothpaste or mild detergent on a soft damp cloth, and then wipe the dirt off.
- 15-. Keep the air vent (intake or outlet) away from obstacles.
- 16-. Do not strike or shake the unit body during operation, otherwise, it will stop working automatically. In this case, restart the unit.
- 17-. After some time operation, dust and dirt may occur in water tank. It is recommended to change water and clean water tank frequently. If select humidifier function while the room temperature is below 0°C, be sure to add warm water in water tank.
- 18-. Do not put the unit under wall socket.
- 19-. Empty water tank to avoid odor occurring when not in use.
- 20-. Do not use after the unit malfunctions. Send to service center for repair.
- 21-. Do not use the unit for other than its intended use.

22-. Do not use the unit when the power cord is damaged. Send to service center for repair. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

23-. Keep the unit out of children's reach. Close supervision should be exercised when children are nearby.

WARNING: Please do not use where children can touch the unit, not let children use the unit by themselves.

24-. Keep cord away from sharp or hot objects.

25-. Thoroughly clean the unit before first time use.

26-. Do not clean with metal scouring pads. It may scratch the surface or cause electrical shock.

27-. Do not clean the unit with flammable liquid.

28-. Avoid sharing a power outlet with any other appliances.

29-. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to OFF, then remove plug from wall outlet.

30-. Do not use new and old batteries at the same time in remote controller.

31-. Take off batteries from remote controller when not in use.

VIII. MAINTENANCE AND CLEANING.

NOTE: After long time operation, the filtration mesh becomes clogged with dust and dirt, which will greatly affect the unit's performance. It is recommended to clean the filtration mesh frequently.

- Cleaning the filtration mesh.

1-. Remove plug from wall outlet.

2-. Catch the filtration mesh handle and pull upwards (shown as fig.4)

3-. Clean filtration mesh with mild detergent and soft brush.

4-. Make sure filtration mesh is completely dry before installing.

- Cleaning the water tank.

1-. Remove plug from wall outlet.

2-. Pull out the water tank (shown as fig.5)

3-. Clean the water tank with a little mild detergent on a towel and then rinse in water.

4-. Put the water tank in place after cleaning.

-Cleaning the body.

1-. Clean the body with a little mild detergent on a soft cloth.

NOTE: Unplug from outlet before cleaning.
No water on the control panel.


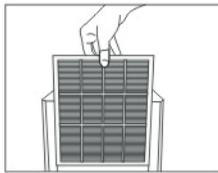


fig.4



fig.5

IX. CIRCUIT DIAGRAM

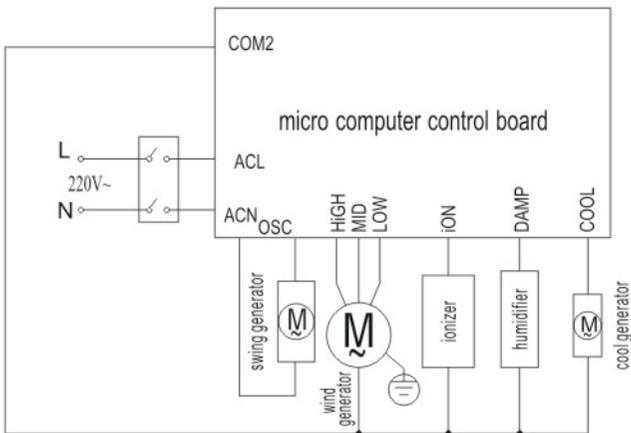


X. TROUBLESHOOTING

If there is something wrong during operation. It may not be the unit's problem. You may check against the following list before send for repair.

PROBLEMS	POSSIBLE REASONS	SOLUTIONS
Not working	1-. The plug is not securely inserted into the socket or not connected well. 2-. The "I" button, on the power switch which is at the side of the unit body, is not pressed. 3-. The "ON/OFF" button is not pressed.	1-. Insert the plug pin into the wall socket and make sure it is connected well. 2-. Press the "I" button, on the power switch which is at the side of the unit body. 3-. The "ON/OFF" button after plugged.
dedust effect not good	1-. The filtration mesh is clogged with dust and dirt, which affects the unit's performance. 2-. The air vent is obstructed.	1-. Clean the filtration mesh. 2-. Remove the foreign objects from the air vent.

Notice:

- 1-. If the problem cannot be found in the list or it persists, please contact our service center or a qualified technician for further inspection.
- 2-. Do NOT open and repair the unit by yourself.

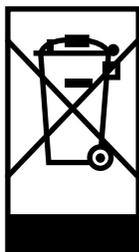

This seal indicates that this product should not be disposed of together with other household waste in the EU. In order to prevent environmental damage or health problems due to poor disposal, recycle it responsibly. To return your used equipment, contact whoever sold the equipment. They can take care of him responsibly.

C/ Alcalaten nº 16, Polígono Industrial La Cova.
Manises, Valencia.
46940



M CONFORT